


# Cranked Band Hinge

## INSTALLATION INSTRUCTIONS





Please review ALL diagrams and instructions in full prior to beginning installation.  
Use this instruction in place of those inside of the hardware box.

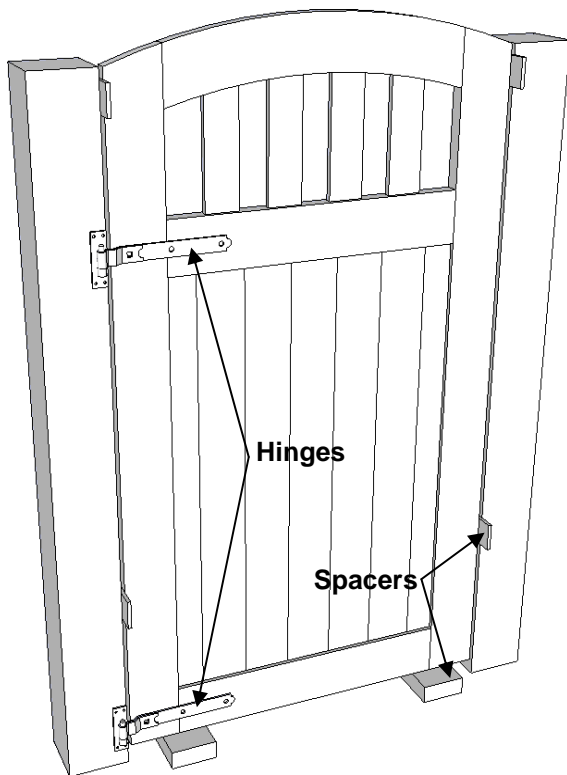

### HINGE INSTALLATION

*Install hinges before latching is installed.*

- 1) Place gate in opening, using spacers at sides and bottom to achieve necessary gaps.
- 2) Position assembled hinges on gate in appropriate location - typically centered on the horizontal rails, with the pintle plates aligned at the post/jamb edge. Make sure that the hinges are vertically aligned with one another. Mark each screw hole with a pencil on the gate and post/jamb. Be sure to note which holes are for flat head screws (round holes) and which are for carriage bolts (square holes)
- 3) Pre-drill each hole location marked for flat head screws.
- 4) Mount straps to gate using fasteners provided. Mount pintle plates to post/jamb using fasteners provided. Do not over tighten. Take care not to scratch powder coating.
- 5) Drill for carriage bolts in marked locations. Insert through strap, gate and washer (in that order) and thread the nut.
- 6) Hang gate by lowering hinge straps over pintles.

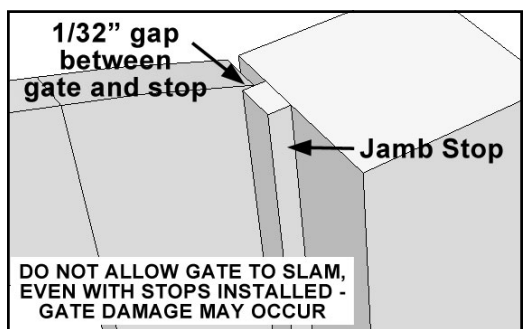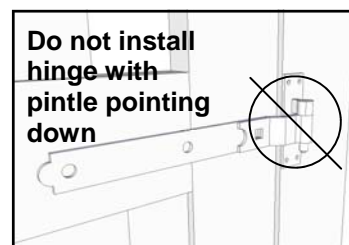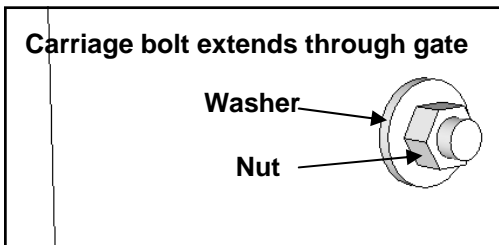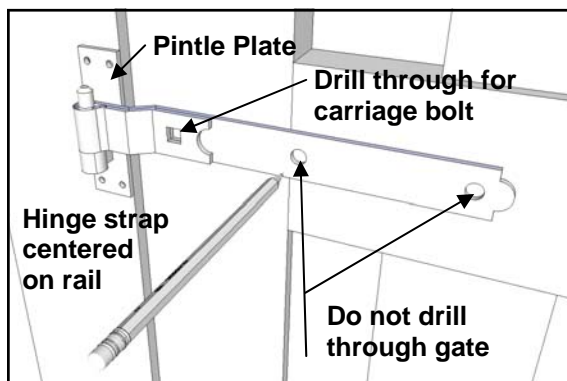

### STOP INSTALLATION

*Failure to install gate stops will void warranties.*

- 1) Cut stop to be at least as long as the gate's edge height.
- 2) Mount stops to posts (or jambs, if applicable) using screws and/or weatherproof wood glue (such as Titebond III). Position stop with 1/32" gap between face of gate and stop when gate is closed.