
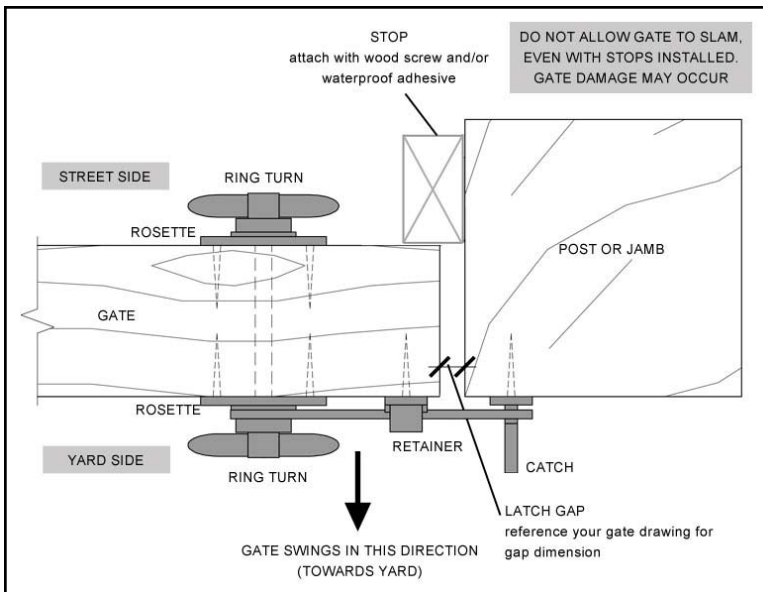
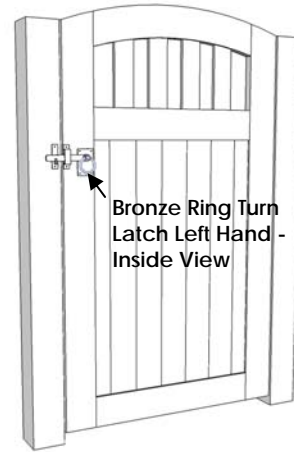


Bronze Ring Turn Latch, Yard Swing

INSTALLATION INSTRUCTIONS

Please review ALL diagrams and instructions in full prior to beginning installation.
Use this instruction in place of those inside of the hardware box.

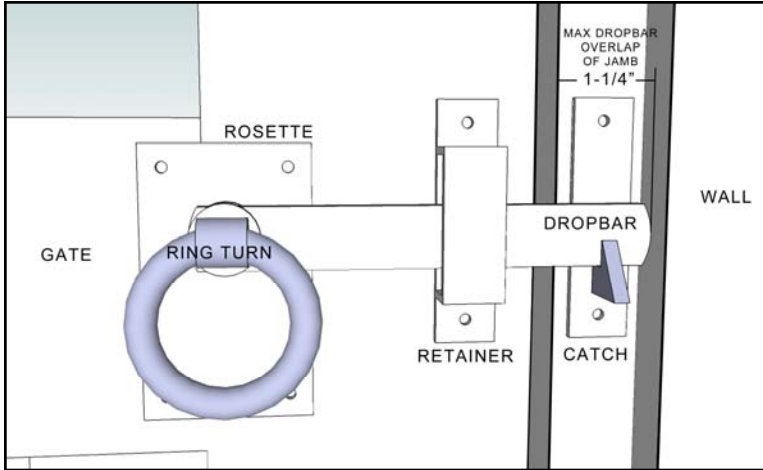

LATCH INSTALLATION

Install Latch after gate and hinges are installed.

1) Drill a 3/4 inch diameter hole in the gate stile (upright) about 3-1/8" from the edge of the gate. Care must be taken to ensure that the rosette is not pressed against the wood of the stile. This would prevent free rotation of the ring.



2) Cut the square rod one inch longer than the thickness of the gate stile.


3) Insert the square rod into one of the rosettes and screw it to the gate ensuring that the square rod is centered in the hole.

4) Place the rosette over the square rod and screw it

to the opposite side of the gate using 1" #8 screws. Make sure that the rosettes are aligned squarely to ensure free rotational movement.

5) Attach the bar retainer guide to the gate near the edge of the gate (use 1-1/2" #8 screws). It should be installed so that the horizontal bar is level and resting on the bottom of the bar retainer guide.

6) Screw the catch on the post parallel and at the same level as the bar retainer guides (use 1-1/2" #8 screws).

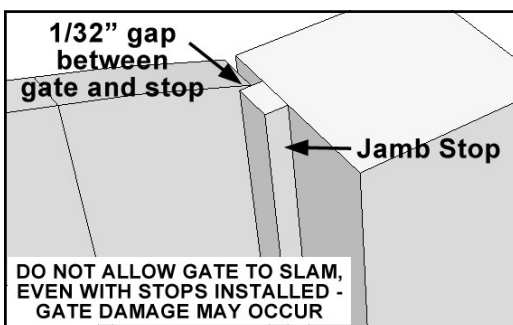

STOP INSTALLATION

Failure to install gate stops will void warranties.

1) Cut stop to be at least as long as the gate's edge height.

2) Mount stops to posts (or jambs, if applicable) using screws and/or weatherproof wood glue (such as Titebond III). Position stop with 1/32" gap between face of gate and stop when gate is closed.